

Installation instruction

Facelift rear lights

Audi A3 8PA Sportback

Article-ID 36507
 36523
 37009

Content

Content	01
General advice	01
Safety instructions	02
References of legal regulations for operation	02
Facelift rear lights	03
Scope of delivery	03
Additional needed items	03
Coding	03
Installation instructions	04

General advice

Congratulations to your new facelift rear lights.
Thank you for choosing a product of Kufatec GmbH.

While developing this product, your personal safety combined with the best operating service, modern design and an up-to-date production technique was especially taken into account.

Unfortunately, despite the utmost care injuries and/or damages might occur due to improper installation and/or use.

Please read the attached instruction manual completely with great care and keep it!

All articles of our production line pass through a 100 % check - for your safety and security.

We reserve the right to carry out technical changes which serve the improvement at any time.

According to each article and purpose, it is sometimes necessary to check each country's legal regulations before installing and starting the unit.

In case of guarantee claims, the device has to be sent back to the seller in the original packaging with the attached bill of purchase and detailed defect's description. Please pay attention to the manufacturer's return requirements (RMA). The legal warranty directions are valid.

The guarantee claim as well as the operating permission becomes invalid due to:

- a) unauthorized changes to the device or accessories which have not been approved or carried out by the manufacturer or its partners
- b) opening the device's frame
- c) device's repairs carried out by one's own
- d) improper use / operation
- e) brute force to the device (drop, wilful damage, accident etc.)

During installation, please pay attention to all safety relevant and legal directions.

The device has only to be installed by trained personnel or similarly qualified people.

Safety Instructions

Installation requires special knowledge.

Do not install the unit yourself. For safe and reliable installation, consult a dealer having special knowledge.

- Never use bolts or nuts from the car's safety devices for installation. If bolts or nuts from the steering wheel, brakes or other safety devices are used for installation of the unit, it may cause an accident.
- Use the unit with a DC 12V negative ground car. This unit cannot be used in large trucks which use a DC 24V battery. If it is used with a DC 24V battery, it may cause a fire or accident.
- Avoid installing the unit in following places:
 - Where it would hinder your safe driving.
 - Where it could damage the car's fittings.
- This unit is only for use in the following vehicles. Only connections described within this instruction guide are allowed or required to use for installation.
- For damage impact caused by faulty installation, unsuitable connections inappropriate vehicles Kufatec GmbH assumes no liability.
- We advise you that these units process data out of the CAN - protocol from the vehicle. As the supplier of this device we don't know the overall system you are working with. If our device causes damage due to other changes made by to the vehicle Kufatec GmbH assumes no liability.
- Kufatec GmbH supplier do not guarantee the use of the product for changes within a new vehicle series.
- If the car manufacturer's don't agree with the installation of our device by reason of warranty the Kufatec GmbH assumes no liability. Please check conditions and warranty before you begin the installation.
- Kufatec GmbH supplier reserves the right to change the device specifications without notice.

References of legal regulations for operation

Only use this unit in the intended domain.

If you use it in a foreign domain, if the unit is not installed properly, or if the unit will be reconstructed, the guarantee will expire.

Facelift rear lights Audi A3 8PA

- Awesome design through integrated light strip technology
- Suitable for all Audi A3 8PA Sportback
- Easy installation

Scope of delivery

- 4 X rear light (only for article-ID 36523)
- 4 X Adapter (36507) - **ATTENTION:** Adapters are marked - **LEFT - RIGHT!**

Additional needed items

- Diagnostic Interface Facelift rear lights Audi A3 8P Sportback
Article-ID 37009

Coding

NOTE: The installation has to be finished before activating the rear lights by using the coding adapter article-ID 37009.

- After installation the facelift rear lights has to be activated
- The coding dongle is just suitable for one vehicle.
- Turn on the ignition and put the red OBD connector into your car's OBD connection. The OBD-Box is located in the driverside's footwell close to the upper cover. Leave the dongle connected for about 15 sec. to the OBD connection. After disconnecting the adapter the activation has been done.



15 Seconds

Installation instruction

Please open the hatch as well as the service cover (image 1). Loose the screws of the outer rear lights and remove it (image 3).

Integrate the delivered Plug & Play adapter (image 4) between the original connector coming from the vehicle and the new outer facelift rear light.



image 1



image 2



image 3

Further you need to remove the cover of the hatch. Please loose the needed screws (image 5). Now you can gently pull the cover.

Loose the screw of the inner rear lights and remove the connection. Integrate the delivered Plug & Play adapter between the original connector coming from the vehicle (image 6) and the new inner facelift rear light.



image 4



image 5



image 6

The single looms of the inner adapters needs to be connect to the **GRAY loom (PIN 3)** of the licence plate illumination (image 7, 8, 9). Please remove about 10 cm of the coat. In order to achieve a proper connection we recommend soldering the new wires.

The installation has been finished.



image 7

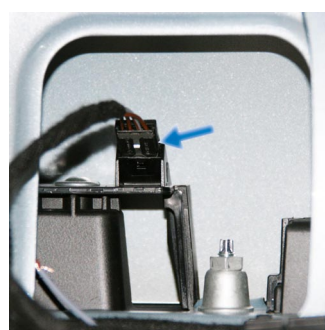


image 8

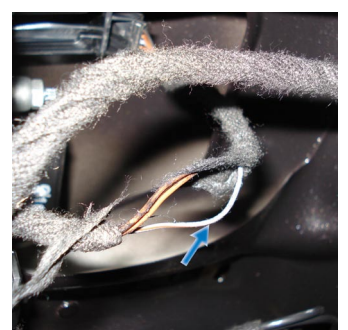


image 9